

4.901-062.0





Valve pliers

Usage

For the disassembly of pressure and suction valves, sieves, filters, etc.

